



Cartridge Machine

USER MANUAL





INDEX

Safety Notice	3
Machine Overview	4
The Grip	5
The Body	6
The GiveKnob	7
Adjust the Give	8
Replacing the GiveKnob	9
The MotorBolt System	10
Changing the Stroke Wheel	11
Detaching the MotorBolt	12
RCA Connection	13
Connecting your Machine	14
Adjusting Needle Depth	15
Additional Information	16
Troubleshooting	17



SAFETY NOTICE



CLASS III SYMBOL

A Class III appliance is designed to be supplied from a separated/safety extra-low voltage (SELV) power source. The voltage from a SELV supply is low enough that under normal conditions a person can safely come into contact with it without risk of electrical shock. The extra safety features built into Class I and Class II appliances are therefore not required. For medical devices, compliance with Class III is not considered sufficient protection, and further more-stringent regulations apply to such equipment.

TECHNICAL DATA	
Operating Voltage:	4-9.5 V DC
Current:	.3 A
Stitch Frequency:	25 -160 Hz
Stroke:	3.2 mm
Connection:	3.5 mm RCA connection
Drive:	Brush DC motor & drive
Operating Mode:	Continuous operation
Ambient Temperature:	+10 to +35 °C
Relative Humidity:	30 to 75%
Dimensions (Ø X L):	33 x 114 mm
Weight:	Approx. 152 g



BARRIER PROTECTING YOUR MACHINE

Although the grip is autoclavable, we strongly suggest the use of barrier products to protect your machine. For a visual demonstration of many barrier protection methods, please visit our YouTube channel at YouTube.com/fkirons.

[&]quot;This machine is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge"

MACHINE OVERVIEW



THE SPEKTRA XION

Changing Tattooing Forever

The first pen style machine providing artists full control of parameters that unleash their creative vision. Compatible with most power supplies on the market, the Spektra Xion is a one tool solution for all your tattooing needs.



THE GRIP







Spektra Xion Grip







Autoclavable Ergonomic Grip Design

Compatible with most membrane needle cartridges on the market

THE GRIP

A llowing artists full control of the machine never possible before, the Spektra Xion offers an ergonomic grip design. The standard Grip

tapers from 32mm to 25mm. Other grip options may be available. The Grip is crafted from a solid rod of 6061 T6 aircraft-grade aluminum.

This polished and anodized grip is safe to be sterilized under steam, in an autoclave or sprayed with cold sanitation solutions.



THE BODY







Spektra Xion Body



THE BODY

The Body is the core of the machine where the reciprocating and give system are housed. Constructed from a solid rod of 6061 T6 aircraftgrade aluminum, this module should be sanitized by wiping it with cold sterilization solutions only.

Caution: Avoid getting fluids into the housing





Body Isometric View

Body Posterior View



THE GIVEKNOB







Spektra Xion GiveKnob



GIVEKNOB

This dial, located at the tip of the body, adjusts your needle strike from hard to soft. Note that this mechanism only spins about one turn (270° or about 11 clicks) generating give travel of the driving element (see page 8 for information on sanitizing).






GiveKnob Front View

GiveKnob Side View



ADJUST THE GIVE

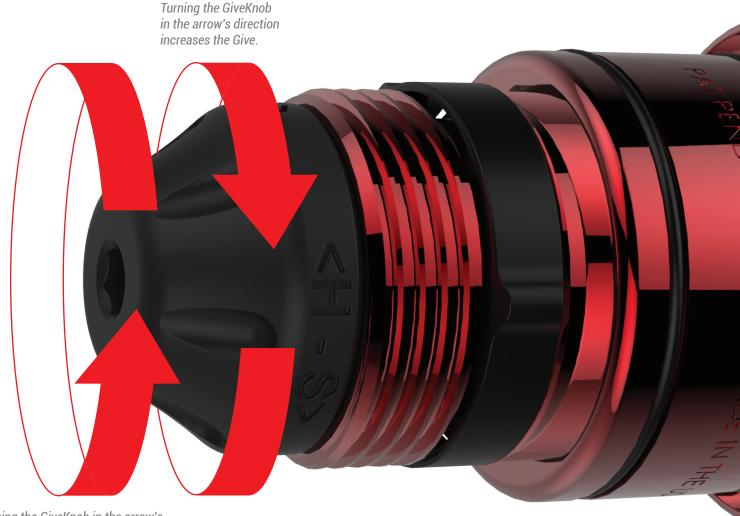

Turning the GiveKnob in the arrow's direction decreases the Give or locks it completely. Always back one click from maximum settings.

ADJUSTING THE GIVE

Remove the Grip by turning counter clockwise until it comes off completely.

An "<H" and "S>" (Hard / Soft) indicates the direction of rotation to achieve a softer or harder strike.

When adjusting Give, gently press inwards while turning the GiveKnob Dial. This will ensure that you are clicked into a setting and never in between "clicks".

You should always notice
a slight radial play once a
setting has been selected.
Always ensure that you
are "clicked-in" to avoid
interference between
GiveKnob and Hex Drive Pin.



REPLACING THE GIVEKNOB



HOW TO REMOVE THE GIVEKNOB

To remove the GiveKnob, use a plastic wedge, and carefully insert in between the GiveKnob and Body to gently pry open. DO NOT use metallic tools! To replace the GiveKnob,

place it in position ensuring the hex orifice matches the Hex Drive Pin. Apply slight pressure until it clicks into place. Rotate in both directions to ensure proper functionality.




THE MOTORBOLT SYSTEM







Spektra Xion MotorBolt System

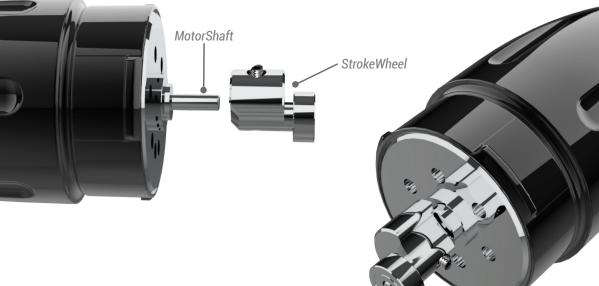


MOTORBOLT SYSTEM

This detachable module houses the motor, cam and RCA connection. Once removed, artists can replace stroke displacement by interchanging the provided StrokeWheels.





CHANGING THE STROKEWHEEL

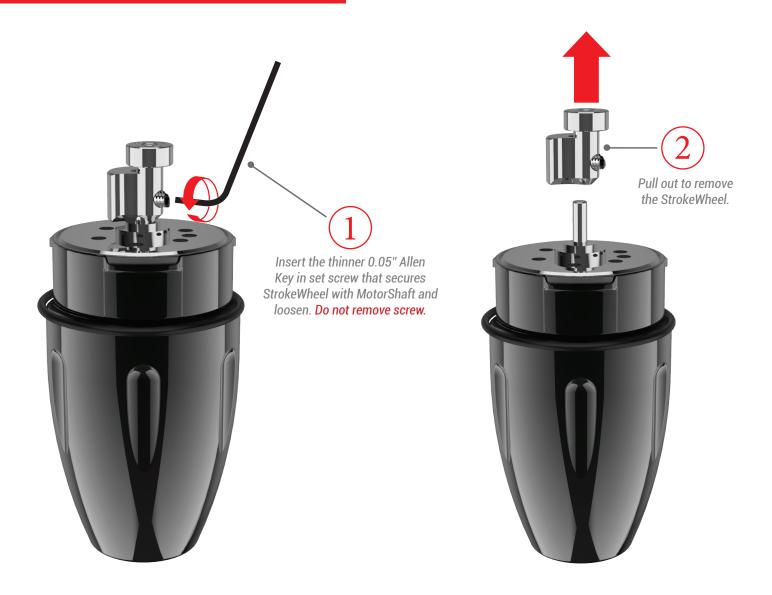

CHANGING STROKEWHEELS

Remove the MotorBolt by pushing in while turning it counter clockwise and pulling out.

Replacing Stroke:

Use the tools enclosed in the Xion box:

1-Insert 0.05" Allen Key

in the screw that secures
StrokeWheel with MotorShaft
and loosen (DO NOT REMOVE).
Pull up to remove the
StrokeWheel.

2-Locate the spare
StrokeWheel located in the
box and ensure that the screw

is loosened enough to allow
the shaft to slide into the
StrokeWheel. Ensure that the
StrokeWheel tops off with
stop washer located around
the shaft. This ensures that
the stroke will not collide with
internal parts of the body when
re-attaching the MotorBolt.



DETACHING THE MOTORBOLT



DETACHING THE MOTORBOLT

To detach your MotorBolt, ensure you have a firm grip on the Body and Grip. Turn the MotorBolt counter clockwise and pull out.

To attach the motor, push in while ensuring the StrokeWheel is engaged with the internal

element. Do not apply force until you feel your StrokeWheel has engaged with the internal element.

If needed, rotate the motor slightly until the stroke finds its course. When this happens, note that the motor is almost all the way in, topping off with the O-Ring around it and the rim of the body's opening.

Before securing the MotorBolt, re-attach by pushing in with pressure and twisting the motor 1/8 of a turn to lock the MotorBolt.



RCA CONNECTION



RCA CONNECTION

This connecting terminal is compatible with most RCA cables on the market. For consistent connection and machine longevity, use of premium RCA cables is recommended.




Gold-Plated Premium Darklab Straight RCA Cord



CONNECTING YOUR MACHINE





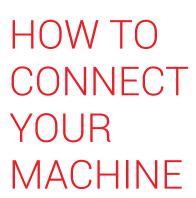





Insert the RCA into the back of the MotorBolt and connect to a Power Supply. Most of the RCA connector jack is concealed by the MotorBolt housing.

Notice that most tattoo power supplies will take 1/4" mono jacks. However, if your





unit uses 1/8" or 3.5mm
jack (similar to headphone
jacks), you will need to use a
reduction from 1/4" female
to 3.5 jack or use a cable that
goes from male RCA to 3.5mm
male jack. Check our website
for alternate cable options.



ADJUSTING NEEDLE DEPTH

ADJUSTING NEEDLE DEPTH

o adjust needle depth,

hold the machine body and MotorBolt while turning the Grip. A counter clockwise turn decreases depth, while a clockwise turn increases depth (also known as needle hang). Each time you turn the grip you can feel the tactile feedback of the ratcheting mechanism. Each "click" displaces your needle 0.2mm and allows you to set your needle precisely without involuntarily turning while tattooing.

Increases needle depth

Turning the Grip as shown increases needle depth.



Turning the Grip as shown decreases needle depth.



ADDITIONAL INFORMATION

VOLTAGE PARAMETERS

While voltage is a parameter that will vary from artist to artist, this machine has been tested to operate at a minimum voltage of around 4 Volts with a maximum voltage of 9.5 Volts. Depending on the type of needle configuration or brand you use, feel free to adjust the voltage to obtain the desired performance.

Note: Exceeding 9.5 Volts is not recommended.

ACCEPTED NEEDLES

Use cartridge needles with internal membrane. This will avoid accidental contamination inside your machine. Fluids such us ink, water or oil will void warranty of the device and may require replacement of internal parts.

MAINTENANCE

- Xion is sold pre-lubricated from factory and does not require internal lubrication.
- Prevent any type of external elements from entering inside the machine as they will disrupt the motion of the component and contaminate lubrication.
- The grip of the machine is autoclavable. Use only steam autoclaves at temperatures no higher than 270° Fahrenheit or 132.222° Celsius. Add a hint of ointment or PTFE grease around internal opening of grip or on stabilizing friction O-rings for optimal functionality after autoclaving. Refer to page 5 for additional information.
- Machine Body and MotorBolt can be sanitized from the outside with cold sterilization products.
- Never spray the surface directly to prevent fluids from entering the machine. Always use pads or disposable paper towels to apply sterilization products.
- The mechanism relies on a return spring. DO NOT DISASSEMBLE MACHINE.

WARRANTY

- All the housing components (Grip, Machine Body and Motor Housing) are covered by a lifetime warranty.
- Internal parts are subject to wear and the motor itself will be covered by a 2 year warranty from the date of purchase.
- Motor warranty is void if motor shows signs of being dropped, of internal fluids entering the motor, and/or IF motor shows signs of being tampered with in any way.



ADDITIONAL INFORMATION

HANDY TIPS

The following tips will help you get the most out of your Spektra Xion and avoid potential issues:

- Always secure your machine. Dropping the machine can cause damage to the magnets, bearings and brushes of the motor.
- Use only cartridges with membranes to avoid contamination.
- · Do not exceed the suggested voltage.
- Always use power supplies with at least 1Amp of current supply.
- Rinse your needle frequently to avoid pigment drying up and slowing down your cartridges. When
 rinsing your needle, ensure to dip only the tip of the cartridge to avoid back flow of fluids.
- Inspect your needles prior to use.
- Use only quality cables. A good connection will ensure consistent performance.
- Avoid scratching the surface of the embodiments.
- Use only FDA-approved cold sterilization solutions for disinfection.
- Do not lubricate machine unless instructed otherwise.
- · Store your machine in a secure place.

TROUBLESHOOTING

1.- Machine manufacturer

FK Irons: 1771 NW 79th Avenue, Doral, Florida 33126

2.- Servicing your machine

Just like any mechanical device subject to use, FK Irons strongly suggests that you service your product at least once a year to ensure that a proper diagnosis of all working parts is conducted. This ensures the optimal condition of all working parts including internal machine clean up and fresh lubrication. Routine servicing will ensure that your machine remains functioning like the very first day. Service is subject to fees.

3.- Warning

Disconnect machine from any power before making any adjustments.

For service inquiries, please contact service@fkirons.com.
For additional tips and tutorials, please visit Youtube.com/fkirons